

REMOTE CONTROLLER REPLACEMENT

1. Turn on the power button



2. Connect the winch Positive power line to battery" +".

3. Push OUT and IN button at the same time.



4. Connect the Negative power line to battery "-".

NOTICE: Keep pushing for 60 second OUT and IN button at the same time

5. The red light is ON. Replacement is finished.

