


HOW TO PROPERLY INSTALL A ROPE TENSIONER DEVICE

- Mount in the place of the back factory fitted aluminium bar for engine-gear.
- The rope tensioner should press the rope from behind during both winding and unwinding of the rope.
- The rope tensioner shall ensure even rope winding.

[NOTE] Rope tensioner is not an electric spooling device!

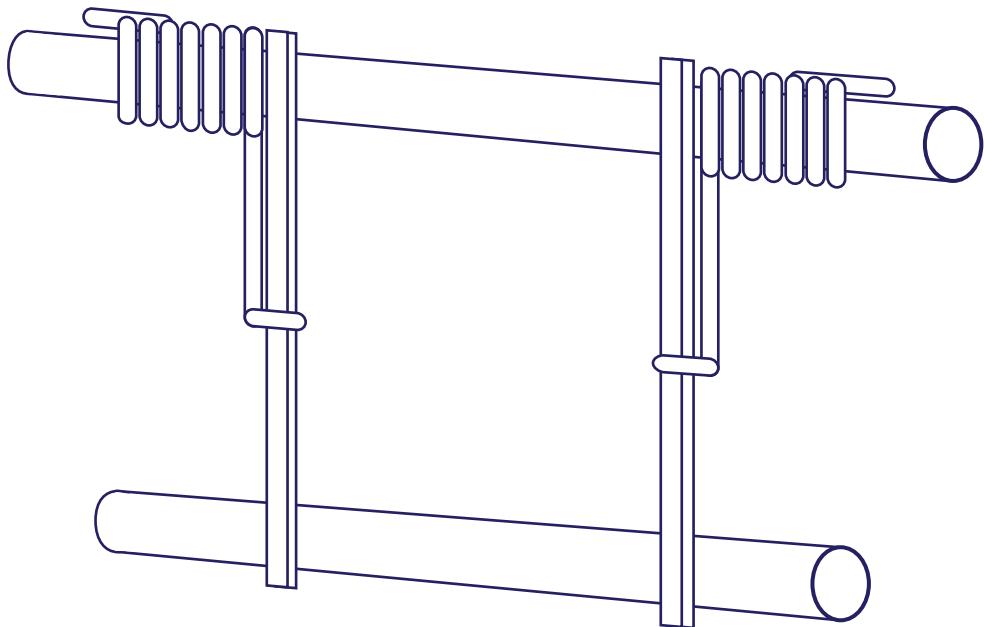

HUSAR
WINCH BETTER STRONGER TOUGHER