

## Pairing the Remote Control

- 1) Disconnect the winch power supply.
- 2) Turn on the wireless remote control.
- 3) Press and hold both buttons on the remote at the same time - the LED should start flashing.
- 4) Without releasing the buttons, reconnect the winch power and keep holding for about 5 seconds until you hear the characteristic click of the relay.
- 5) Check if the winch is operating properly.

